

Tools

- Straightedge
- Measuring Tape
- Sharp Knife
- Optional drawer handles and screws

Procedure

- Measure width across the opening of the window frame
- Measure length from the base of the frame opening to the top
- Make sure you measure at both ends of the Mat before cutting to ensure a straight edge
- Trim window plug 1" to 2" greater than the width
- Trim window plug 1" to 2" greater than the length
- Insert window plug into window frame
- Mat will compress and expand to cover entire opening
- For large window see next section

Backer Board

- For large window openings (typically greater than 3' in either dimension) use a backer board
- Select a lightweight, rigid, construction material (1/4" plywood or wall wood panels)
- Optional, install 2 drawer handles on backer board to make it easy to put up and take down
- Trim backer board to 1" less than width
- Trim backer board to 1" less than length
- Apply adhesive, 3M 27 or Liquid Nails for foam products, on the back of 2" SoundAway Mat and backer board
- Center and adhere Mat to backer board
- Alternate to backer board
 - Use a tension rod (used to hang shower curtains) across the width along top or bottom or both to keep the plug in place



1. Window Plug Backer Board and Tools




2. Measure Window




3. SoundAway Mat



4. Measure Backer Board and Mat

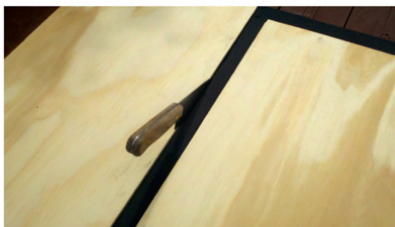


5. Cut SoundAway Mat

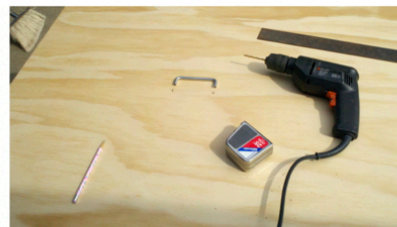

6. Install Drawer Handle



7. Backer Board with handles

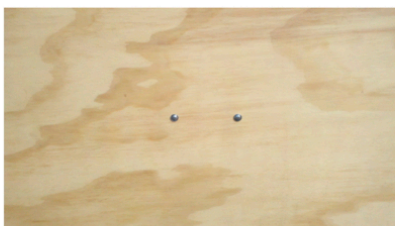


8. Backer Board screws for handle



9. Isolated handle side



10. Adhering Mat onto Backer Board

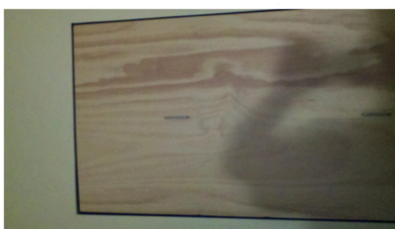

11. Insert Window Plug



12. Remove Window Plug